


Maintenance and Usage Manual

Pocket Rescue Tool

The Knife is to be opened using either the thumb lifter, or, in the German market version, the nail opener.
The Knife locks via a Liner Lock System, which is unlocked by the button and can then be operated.
While the button is depressed there is an inbuilt safety stop at 90° to prevent injuries.
Releasing the button allows the knife to be folded.

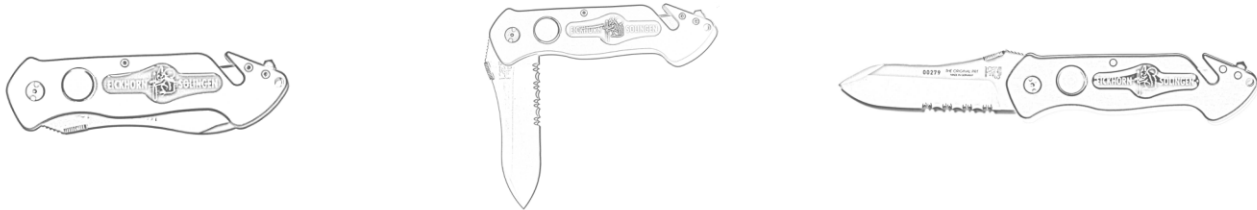


The Glass Breaker at the rear of the Knife is used like a Hammer.
Because of its form and hardness not much force is needed to shatter a glass pane.



The Belt Cutter has an extra sharp blade for cutting belts. Belts should be tensioned using one hand to facilitate cutting. After that, using your other hand, position the belt cutter using the guidance groove to align the angle with the belt's edge, after which pulling will near effortlessly cut the Belt.

Maintenance Notice:

Modern knife steel is generally stainless, although "completely rust-free" does not exist for Steel. Because of this, you should regularly clean your knife. Wash in lukewarm soapy water and dry with a towel. Especially with folding knives it makes sense to not only treat the blade with a bit of oil, but to also add a drop to the mechanical parts.

 In case of strong contamination by dust, cloth or debris it is commonly the case that the knife no longer closes properly and is sent in for repairs. Carrying the knife in a pocket will not prevent this contamination. Blowing the mechanism out with compressed air or with a pipe cleaner can help prevent these unnecessary costs.



Contamination most commonly occurs at this turning mechanism.